


60cm Freestanding Dishwasher

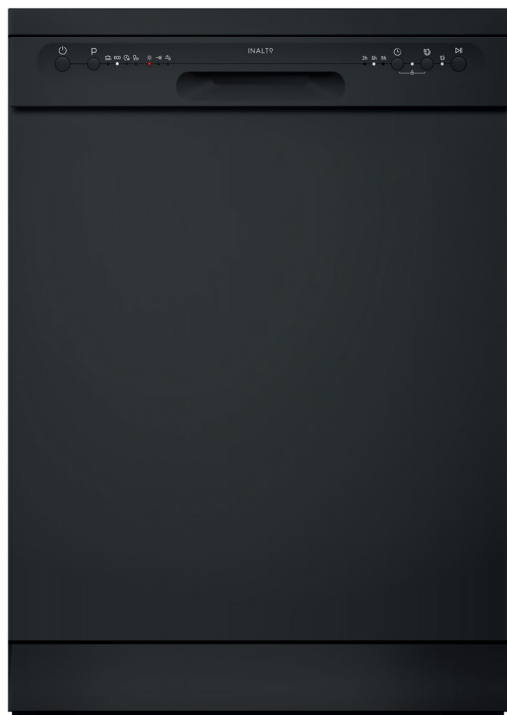

FEATURES

12 Place Settings, 4 Wash Programs,
Height Adjustable Upper Basket, Delay Start Function,
Collapsible Plate Racks, Stainless Steel Micro Filter,
Extra Dry Function, Child Lock,

Congratulations on your new InAlto 60cm Freestanding Dishwasher!

THE CONTROL PANEL



1. On/Off button
2. Program button
3. Intensive program indicator
4. ECO program indicator
5. 90 Minute program indicator
6. Rapid program indicator
7. Rinse Aid program indicator
8. Program End indicator
9. Water Supply indicator
10. 3h/6h/9h Delay Start indicators
11. Delay button
12. Child Lock function
13. Child Lock indicator
14. Extra Drying function button
15. Extra Drying indicator
16. Start/Pause button

SUPPORT

Telephone: 1300 11 4357
Email: support@residentiagroup.com.au

DETAILS

Dimensions (W, D, H mm): 598 x 600 x 845
Warranty: 2 Years

ADJUSTING THE UPPER BASKET HEIGHT

The height positioning of your upper basket can easily be adjusted between two settings, allowing you to accommodate taller dishes in either the upper or lower basket.

1. Slide out the upper basket to the end of its extension arm.
2. Continue to slide out the upper basket whilst lifting it upwards slightly, allowing the wheels to come past the hook at the end of the arm.
3. Re-insert the upper basket onto the slide out arms, taking care to position it onto the upper or lower set of wheels on the basket's side.
4. Push in the upper basket.

Note:

For more details on adjusting the upper basket height, refer to Page 16 & 17 of your User Manual.

REGISTER YOUR WARRANTY

- **AU:** www.inalto.house/registration
- **NZ:** www.inalto.house/nz/registration